

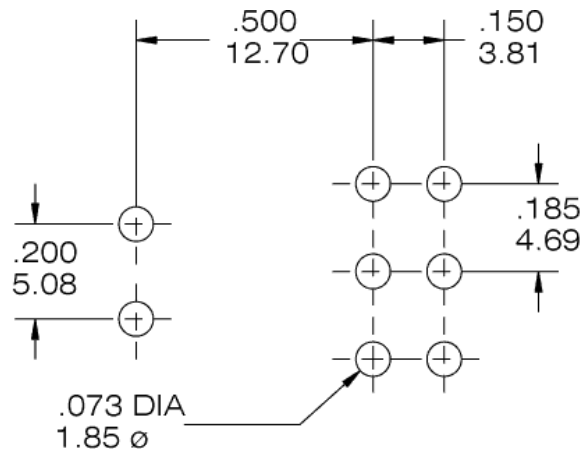


Product Drawing

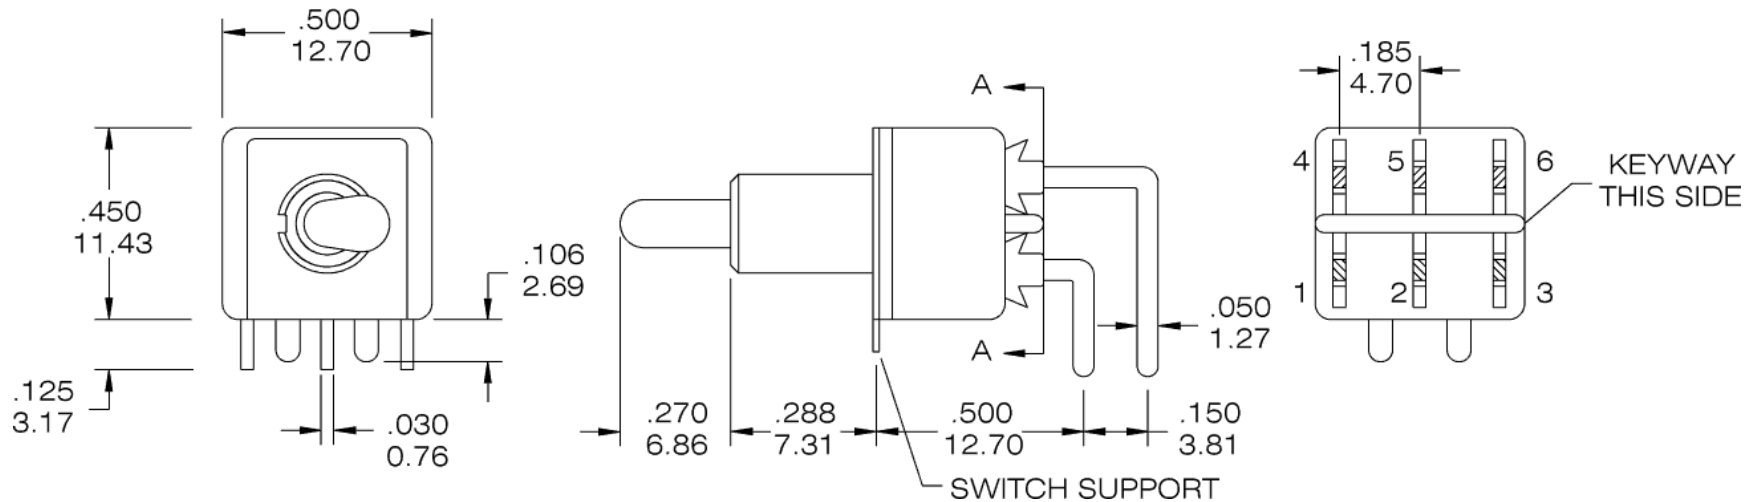

PCB Footprint

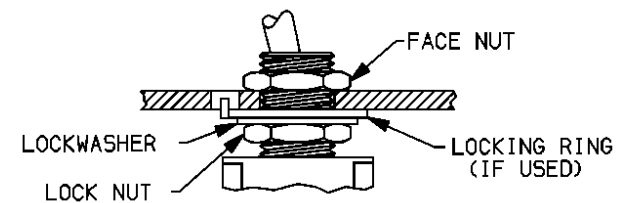

Typical Assembly with Locking Ring
 Locknut should always be used with non-flanged bushing
 To prevent damaging panel front, always tighten locknut
 at the back of the panel.

				Description:	Standard outline drawing.
Page:	1	Date:	2003-12-02	P/N	T8021
of:	1	Revision:	1.0		